

____IRONGATOR**台虎**_


721Q/6



配置文件



- 外壳主体由灰口□□□造
- 主体□漆,□口途防腐油,其他部分□□
- uniPRO滑□□确保移□部件的精确□行
- 快速移[]系[]

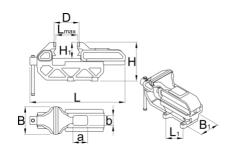

	В	L₹	L	D	H1	а	b	Н	L1	B 1	1
621482	125	120	336	17 - 62	95	66	44	176	132	90	14500
621568	150	140	400	20 - 75	117	80	53	211	154	105	23500

* Images of products are symbolic. All dimensions are in mm, and weight in grams. All listed dimensions may vary in tolerance.

用途 (pictures)



Accessories







_____721/6和721Q/6用[]用[]制[]]

配件



_____721/6和721Q/6用[]用[]制[]]

Safety tips



0

0



• Avoid clamping with heavy pressure on the corner of the vice jaws as it may break off a corner of a jaw.

• Replace a bent handle as soon as possible.

• Use bolts in all of the holes in the base of the vice.

• Use lock washers under the nuts.

• When work is held in a vice for sawing, saw as close to the jaws as possible to prevent vibrations. Be careful not to cut into the jaws.

• When clamping extra long work, support the far end of work rather than putting extra pressure on the vice.

• Regularly lightly oil all moving parts.

• If the threaded part of the vice is exposed, keep it free of chips and dirt.

• Discard any vice that exhibits the slightest hairline fracture.

• Always use a vice large enough to hold the work without strain.

• Don't use the jaws of a vice as an anvil.

• Never use an extension handle for extra clamping pressure.

• Never pound on the handle to tighten beyond hand pressure.

• Never try to repair a vice by welding or brazing.

Don't try to bend a heavy rod in a light vice.