

球型前叉座拆卸工具

1616/4



配置文件



 
□□□□



- 材料：特殊工具□

- 表面处理：根据DIN50938

如何使用个工具：

-



	A	B	H	D1	D2	D3	D4	
615527	25	55	100	37	41	44	47	422

* Images of products are symbolic. All dimensions are in mm, and weight in grams. All listed dimensions may vary in tolerance.