

# Dropout alignment gauges

## 1692/4



#### **Profiles**



### Product features

material: premium flex plus carbon steel

surface finish: blacken to standard DIN 50938

#### How to use the tool:

• To use, remove the wheel and insert the tool into the frame. This tool is used for the alignment of the rear triangle and dropouts.



	D	В	L	<b>1</b>
618412	30	84	309,5	1222

<sup>\*</sup> Images of products are symbolic. All dimensions are in mm, and weight in grams. All listed dimensions may vary in tolerance.

# Usage (pictures)

