

1/2"气口

1562



配置文件



□□□□

- 每分□7000□的空□□速
- 最大扭力949 Nm
- 最大气□ : 6.2 Bar
- 空气消耗量119 升/分□
- 1/4"□□□
- 最大螺栓尺寸M18

□□□

 
- 控制扭力
- 快速□□
- □□□□□□





用途:

- 汽□行□
- 航空□
- □□□□
- 重工□
- 大型建筑机械
- 造船□
- □□□□

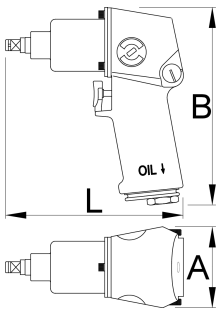重要事□!

- □□□□Unior气□套筒




		L	A	B		
615321	1/2"	204	70	192	949	2800

* Images of products are symbolic. All dimensions are in mm, and weight in grams. All listed dimensions may vary in tolerance.

Photo (pictures)



 
Accessories




气□管接□



 气□管接□



气□管接□

 

气□管接□



3/8"气□□□□□器和□滑器



1/2"气□□□□□器和□滑器



螺旋气□□管

Safety tips



- The pressure in the tool during the operation has to be at least 6.2 bar for the tool to work properly.
- Regularly clean and dry the air filters and inlet air supply.
- Always use clean and dry air with the correct mixture of oil, for maximum tool life.
- Check the joints and ensure that the tubes and other equipment are not damaged before use.
- All tools should be gently oiled prior to being stored.
- Always store pneumatic tools in dry places away from water.
- Always use original spare parts.
- Repairs can be performed only by authorised staff people authorised by Unior d.d.



- Always disconnect tools not in use from the air supply.