



# 1.1/2"气[双向]

1596



#### 配置文件

## Vear 🛈 extended 🚱 🚱 🚺 👘 🖅

#### 

- 每分[]3000[]的空[]]速
- 最大扭力3388 Nm
- 最大气[]: 6.2 Bar
- 空气消耗量410 升/分□
- 1/2"[[]]
- 最大螺栓尺寸M45

- 控制扭力
- 快速□□
- •

 
用途:

- 汽[]行[]
- 航空[]

- 重工[]
- 大型建筑机械
- 造船[]
- •

#### 重要事[]!

● [][]Unior气]套筒



		В	L	M	<b>≜</b>
617690	1.1/2"	550	450	3388	17800

\* Images of products are symbolic. All dimensions are in mm, and weight in grams. All listed dimensions may vary in tolerance.

## Accessories



# Safety tips



The pressure in the tool during the operation has to be at least 6.2 bar for the the air supply.

• Regularly clean and dry the air filters and inlet air supply.



 Always disconnect tools not in use from the air supply. • Always use clean and dry air with the correct mixture of oil, for maximum tool life.

• Check the joints and ensure that the tubes and other equipment are not damaged before use.

• All tools should be gently oiled prior to being stored.

• Always store pneumatic tools in dry places away from water.

• Always use original spare parts.

• Repairs can be performed only by authorised staff people authorised by Unior d.d.