

气□角磨机

1518



配置文件













 
- 每分[]11000[]的空[]]速
- 最大气[]: 6.2 Bar
- 空气消耗量170 升/分[]
- 1/4"□□□

- 可拆卸把手
- 防止意外□□的安全杆

用途:

旋[部件的保[

- 也可用于小空□/面□□小的位置
- 工具行[]
- 混凝土和□壁表面清□
- 木材表面清[]
- 清除色彩和光[]
- 除□
- 切割剖面和金属板材
- 其他家庭用途



	L	A	D	•
617730	230	90	125	2175

 $^{^{\}ast}$ Images of products are symbolic. All dimensions are in mm, and weight in grams. All listed dimensions may vary in tolerance.

用途 (pictures)



Photo (pictures)



Accessories







 




3/8"气□□□□□器和□滑器



1/2"气□□□□□器和□滑器



Safety tips



- The pressure in the tool during the operation has to be at least 6.2 bar for the tool to work properly.
- Regularly clean and dry the air filters and inlet air supply.
- Always use clean and dry air with the correct mixture of oil, for maximum tool life.
- Check the joints and ensure that the tubes and other equipment are not damaged before use.
- All tools should be gently oiled prior to being stored.
- Always store pneumatic tools in dry places away from water.
- Always use original spare parts.
- Repairs can be performed only by authorised staff people authorised by Unior d.d.



• Always disconnect tools not in use from the air supply.