

气□角磨刻磨机

1516A



配置文件













 


- 每分[]20000[]的空[][速
- 最大气[]: 6.2 Bar
- 空气消耗量113 升/分□
- 1/4"
- ___6 mm
- **内部[管尺寸**10mm

- 此角度□□可研磨普通研磨机无法□到的位置。
- 防止意外□□的安全杆
- 薄切割□(研磨/抛光□)和其他零件/延伸件的□易□□。
- 此尺寸的极限功率
- 小型□□工具
- 无□□速□□□速

用途:

- 精确研磨
- 完全研磨
- 工具行[]
- 汽[]行[]
- 航空[]
- 混凝土和□壁表面清□
- 木材表面清[]
- 清除色彩和光□
- 除□
- 0000000
- 0000000
- 各种其他表面



	L	Α	•
617732	162	76	740

 $^{^{\}ast}$ Images of products are symbolic. All dimensions are in mm, and weight in grams. All listed dimensions may vary in tolerance.

用途 (pictures)





Photo (pictures)



Accessories





 






3/8"气□□□□□器和□滑器





Safety tips



- The pressure in the tool during the operation has to be at least 6.2 bar for the tool to work properly.
- Regularly clean and dry the air filters and inlet air supply.
- Always use clean and dry air with the correct mixture of oil, for maximum tool life.



Always disconnect tools not in use from the air supply.

- Check the joints and ensure that the tubes and other equipment are not damaged before use.
- All tools should be gently oiled prior to being stored.
- Always store pneumatic tools in dry places away from water.
- Always use original spare parts.
- Repairs can be performed only by authorised staff people authorised by Unior d.d.