

Pneumatische staafslijper, haaks

1516A



Profielen



Product attributen

- free speed 20000 revolution per minutes
- maximum air pressure: 6,2 Bar
- air consumption 113 l/min
- air inlet 1/4"
- collet capacity 6 mm
- internal hose size 10mm


Voordelen:

- this angle edition enables access to difficult-to-reach places which normal grinders cannot reach
- safety lever which prevents accidental turn-on
- simple clamping of thin cut-off wheels (grinding/polishing pins) and other parts/ extensions
- extreme power based on size
- small and compact tool

- continuously variable regulation of rpm

Gebruik:

- precise grinding
- full grinding
- tool industry
- car industry
- aircraft industry
- cleaning of welds
- cleaning of concrete and wall surfaces
- cleaning of wooden surfaces
- removal of colours and varnish
- removal of rust
- grinding of bearings
- grinding of motor valves
- grinding of gears and coils
- various other surfaces

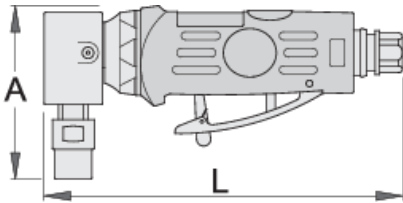

| | | | |
|--|----------|----------|---|
|  | L | A |  |
| 617732 | 162 | 76 | 740 |

* Afbeeldingen van producten zijn symbolisch. Alle afmetingen zijn in mm en gewicht in gram. Alle vermelde afmetingen kunnen variëren in tolerantie.

Gebruik (Afbeeldingen)



Foto (Afbeeldingen)



Accessoires



Koppeling, man



Koppeling, man



Koppeling, vrouw



Koppeling, vrouw



Pneumatische filterdrukregelaar en olieverniveelaar 3/8"



Pneumatische filterdrukregelaar en olieverniveelaar 1/2"



Spiraalslang

Veiligheidstips



- The pressure in the tool during the operation has to be at least 6.2 bar for the tool to work properly.
- Regularly clean and dry the air filters and inlet air supply.
- Always use clean and dry air with the correct mixture of oil, for maximum tool life.



- Always disconnect tools not in use from the air supply.

- Check the joints and ensure that the tubes and other equipment are not damaged before use.
- All tools should be gently oiled prior to being stored.
- Always store pneumatic tools in dry places away from water.
- Always use original spare parts.
- Repairs can be performed only by authorised staff people authorised by Unior d.d.