

通用离合器校准器

2206



配置文件



□□□□

- 用于大部分□□离合器
- 离合器尺寸范□：15 - 28 mm
- 易于使用
- 2206号工具是大部分□准□□离合器的唯一通用离合器校准器。通□□整离合器和□□之□的距离□行□整，完成此操作。在移除离合器校准器后，离合器的□个部件将□合并根据其□校准□□。

 
 


619730




211


用途 (pictures)

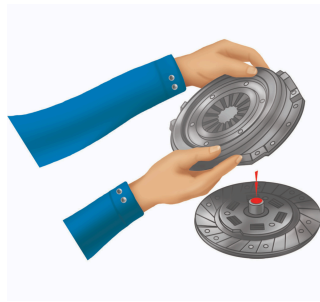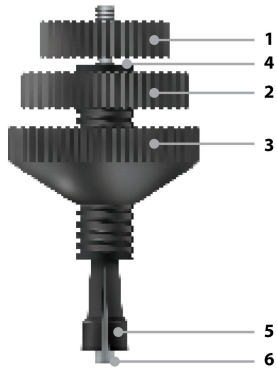

Place the spring plate on the clutch disc.

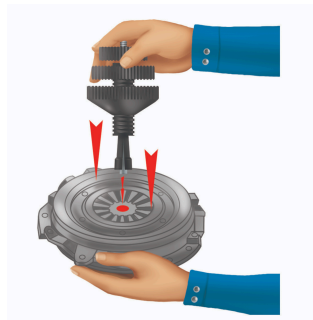

Turn the knob (3) until it touches the knob (2). Keeping the regulating screw still, unscrew the knob (1) and support it against the knob (2). Insert the device in the centre of the gear disc, passing it through the spring plate and press down.

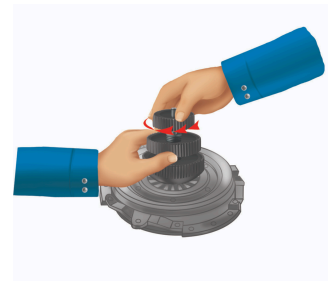

Keeping the knob (2) in place, turn knob (1) and block the expanding cone in the centre of the clutch disc.




Tighten knob (3) until it touches the spring plate but without blocking the knob.



Manually centre the disc on the spring plate.



Keeping the assembly centered, tighten knob (3) against the spring plate.

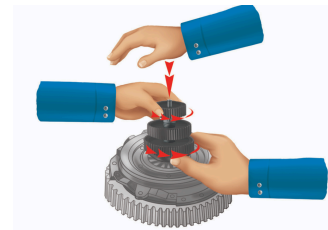

Place the clutch on the engine flywheel and fix it. Unscrew knob (3). Completely unscrew knob (1) and push to release the expanding cone. Remove the tool from the clutch.

