

数字扭力扳手

266



配置文件

 1 year  1+ extended warranty

□□□□

- 目□扭矩警告:蜂□器+ 12 LED灯
- □□□□:□□□□/□□
- □□□□: N-m, in-lb, ft-lb, kg-cm
- □□□□:□□□
- □□□:52
- □□:AA×2□(□□□□)
- □□□□(□□□□):110□□□
- □□□□(□□):1□
- 数据内存大小:250个□入

- 10档可 \square 扭力 \square
- 工作温度:-10°C ~ 60°C
- $\square\square\square\square$:-20°C ~ 70°C
- 湿度:高 \square 90%不凝 \square
- 跌落 $\square\square$:1米
- 振 $\square\square\square$:10 g
- $\square\square\square\square\square\square\square\square$
- 精度CW: +/-2%, CCW: +/-3%
- $\square\square\square\square$
- Download data transfer program
(https://www.uniortools.com/res/files/assets/Uploads/266_calibration_program.zip)

Warranty

- 保修周期 : 1年



			L	axb	
627575	1/4"	1,5 - 30	390	9 x 12	1395
627576	1/2"	6,8 - 135	410	9 x 12	1619
627577	1/2"	10 - 200	545	14 x 18	2268

* Images of products are symbolic. All dimensions are in mm, and weight in grams. All listed dimensions may vary in tolerance.

用途 (pictures)



Photo (pictures)



Accessories



266棘轮内嵌工具



可扳手内嵌工具266



266的配套梅开扳手内嵌工具

Safety tips



- Only an authorised person in a certificated service centre can perform technical maintenance.
- Tools should always be serviced and calibrated by a certified service engineer.
- Tool should only be used for precise tightening as specified in the instruction manual.
- Check instruction manual on how to read the value scale on the tool properly.
- Stop tightening after hearing a feedback from the tool.
- Use only sockets with the same square drive.
- Always return the value on the scale back to 0 after usage and before storing.

Safety (pictures)

