



Tehnički podaci
uniortools.com

Stalak za servisiranje bicikala sa
stegom sa podešivim prihvatom i
sa fiksnom pločom

1693BS-US




Profilii



Opis proizvoda

- Stalak za servisiranje bicikala sa fiksnom pločom dizajniran je za svakodnevnu upotrebu u servisnim radionicama.
- Fiksno postolje je ergonomskog oblika. Maksimalni kapacitet je 30 kg, što omogućava servisiranje težih bicikala (namenjenih za strme i nepristupačne staze).
- Pogodne za cevi prečnika od min. Ø24 mm do max. Ø40 mm
- Težina stalka je 36 kg.
- prihvatile čeljusti sa gumenom zaštitom su zamenjive, art.1693.11

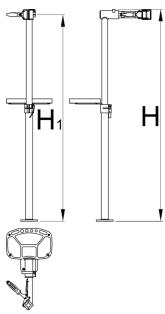

Barcode	Height H1	Height H	Width B	Depth A	Weight W	Unit
---------	-----------	----------	---------	---------	----------	------

625013

985

1570

726

572

1700

38800

* Fotografije proizvoda su simbolične. Sve dimenzije su u mm, a težina u gramima. Sve navedene dimenzije mogu odstupati u granicama tolerancija.


Upotreba (slike)




Adjust bike stand height? To adjust the bike stand height, release the lever (C) and adjust the top tube (D).



Adjust jaw angle and clamp bike safely? To adjust the bike stand jaw angle, release lever (F) and adjust/rotate (E).

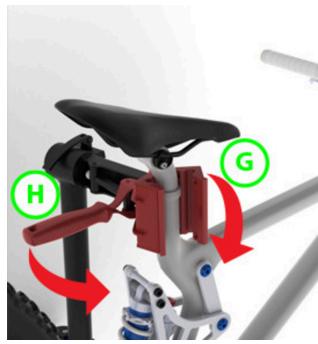

Adjust opened jaw (G) to the seatpost or bike tube. Turn handle (H) until jaw firmly grabs the tube.

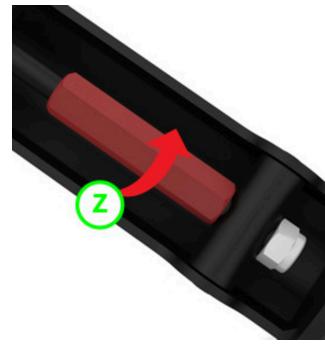

To adjust the jaw opening, turn the long screw (Z) with hand in needed direction as shown on picture.



Release bike safely from stand? To release, firmly hold bike frame. Flip handle (I) to quickly release tube from the jaw.



To mount the stand without fixed plate to the floor or ceiling, use appropriate screw anchors and screws (P) according to the floor/ceiling material, as shown on picture. Screws and screw anchors are not included.